



Liebert® PSI™

750/1000/1500/1920/3000VA, 60Hz, 120VAC

User Manual

DISCONTINUED

DISCONTINUED

Technical Support Site

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures. Visit <https://www.VertivCo.com/en-us/support/> for additional assistance.

TABLE OF CONTENTS

Important Safety Instructions	1
Glossary of Symbols	5
1 Introduction	7
2 What's Included	9
3 Installation	11
3.1 Preparation	11
3.2 Tower UPS Installation	11
3.3 Rack-Mount UPS Conversion and Installation	12
3.4 Orient Display for Installation	13
3.5 Charge Batteries and Perform Battery Startup	14
3.6 Connect Input Power and Load	14
3.7 Connect Network Surge protection	15
3.8 Connect Computer Interface Port	16
3.9 Set Up Liebert MultiLink software	16
3.10 EPO Switch	17
4 Controls and Indicators	19
4.1 Control Buttons	19
4.1.1 On/Alarm Silence/Manual Self-Diagnostic Test	19
4.1.2 Off Button	20
4.2 Status Indicators	20
4.2.1 Status Change Button	20
4.2.2 Load Level Indicator	20
4.2.3 Battery Level Indicator	21
4.2.4 UPS Status Indicators	21
5 Operational Modes	23
5.1 Normal Mode	23
5.2 Buck/Boost Mode	23
5.3 Battery Mode	23
5.4 Battery Recharge Operation	23
6 Communication	25
6.1 DB-9 Connector	25
6.2 Remote Shutdown Via the DB-9 Connector	25
6.2.1 Any Mode Shutdown Via Pins 5 & 6	25
6.2.2 Battery Mode Shutdown Via Pins 4 & 5	25
6.3 Network Surge Protection Connectors	26
6.4 UPS Communication	26
6.5 UPS Inverter/Transfer Voltage Configurations	26
7 Battery Maintenance	27
7.1 Battery Charging, Storage	27
7.2 Internal Battery Replacement Procedure	27

DISCONTINUED

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the UPS.

- Intended for installation in a temperature-controlled, indoor area free of conductive contaminants.
- Maximum ambient temperature 104°F (40°C).

Read this manual thoroughly before attempting to install or operate this UPS.

The equipment can be installed and operated by individuals without previous training.



CAUTION: To reduce the risk of fire, connect PS3000RT3-120 models only to a circuit provided with 30 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70. Other Liebert PSI models must be connected to a circuit with 20 amperes maximum branch circuit overcurrent protection.



WARNING! Operate the UPS only from a properly grounded (earthed) 110-127VAC, 50Hz or 60Hz AC supply.

Some components are live, even when AC power is disconnected. For service, contact a properly trained and qualified technician. Do not remove the cover; the UPS has no user-serviceable parts inside except the internal battery pack.



WARNING! Although the UPS has been designed and manufactured to ensure personal safety, improper use can result in electrical shock or fire. To ensure safety, observe the following rules:

Turn Off and unplug the UPS before cleaning it. Clean the UPS with a dry cloth. Do not use liquid or aerosol cleaners.

Do not install or operate the UPS in or near water.

Never block or insert any objects into the ventilation holes or other openings of the UPS. Keep all vents free of dust accumulation that could restrict air flow.

Do not place UPS power cord anywhere it might be damaged.

Battery Handling Precautions



WARNING! Batteries should be replaced only by properly trained and qualified personnel knowledgeable of batteries and required precautions.

A battery can present a risk of electrical shock and high short-circuit current. The following precautions must be observed when working on batteries:

Remove watches, rings and other metal objects.

Use tools with insulated handles.

Do not dispose of the battery or batteries in a fire. The battery may explode.

Do not open or mutilate the battery or batteries. Released electrolyte is toxic. It may cause injury to the skin and eyes.

When replacing the battery, use the same type of battery as is listed in Table 8-1.

Handle, transport and recycle batteries in accordance with local regulations.

CONDITIONS OF USE —The input supply outlet must be within 6 ft. (1.8m) of the UPS and be easily accessed.

This UPS provides conditioned power to connected equipment. It is not intended for use with life-support and other designated “critical” devices. Maximum load must not exceed that shown on the UPS rating label. If uncertain, consult your local dealer, local Vertiv representative or Channel Support Applications.

When installing the UPS or making input and output connections, comply with all relevant safety codes and standards (e.g., UL 1778).

Placing magnetic storage media on top of the UPS may result in data corruption.

ELECTROMAGNETIC COMPATIBILITY—The Liebert PSI complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment uses, generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the UPS and the receiver.
- Connect the UPS to an outlet on a circuit different from the one the receiver is connected to.

NOTICE








 



Do not connect equipment that could overload the UPS or demand half-wave rectification from the UPS, such as electric drills, vacuum cleaners, laserjet printers and hair dryers.

DISCONTINUED

DISCONTINUED

This page intentionally left blank.

GLOSSARY OF SYMBOLS

	Risk of electrical shock
	Indicates caution followed by important instructions
	Indicates the unit contains a valve-regulated, lead-acid battery
	Recycle
	DC voltage
	Equipment grounding conductor
	Bonded to ground
	AC voltage
	ON/Alarm Silence/Manual Self-Diagnostic Test
	OFF
	Status Change Button

DISCONTINUED

This page intentionally left blank.

1 INTRODUCTION

The Liebert PSI™ is a 2U, line-interactive UPS that may be installed in a rack or used as a tower UPS. Status indicators on the front of the Liebert PSI display load level, battery level, buck/boost, site-wiring fault and battery status. Controls include a combination ON/ Alarm Silence/Manual Self-Diagnostic button, an Off button and a Display Status Change button.

The Liebert PSI has USB, DB-9 (contact closure) and Liebert IntelliSlot® ports. The DB-9 and USB ports provide detailed operating information including voltages, currents, and alarm status to the host system when used in conjunction with Liebert MultiLink™ shutdown software.

Figure 1.1 Front view of UPS, rack mount

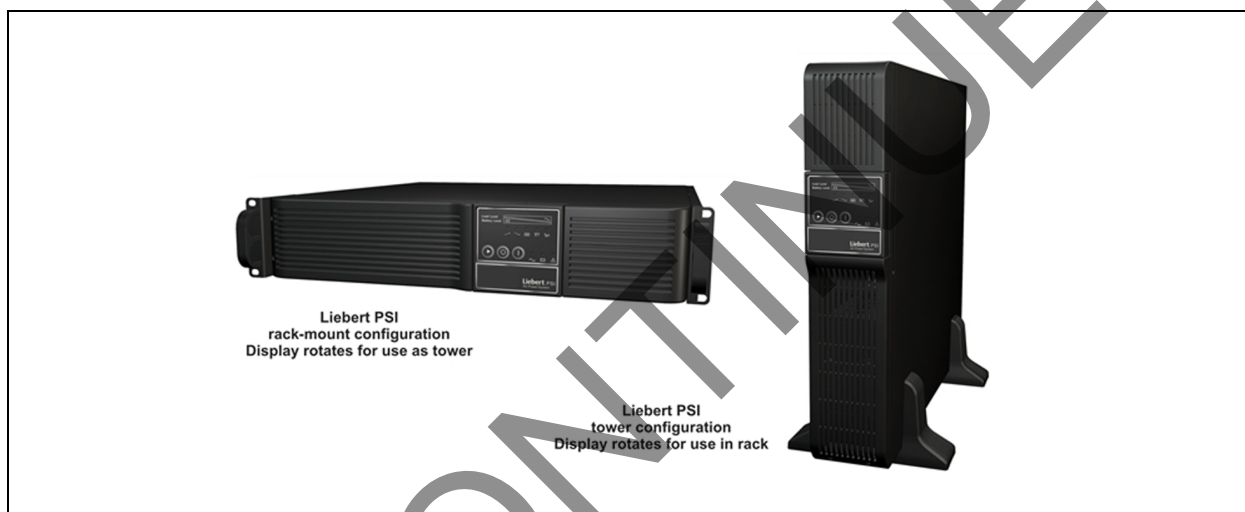


Figure 1.2 1000 and 1500VA—rear view

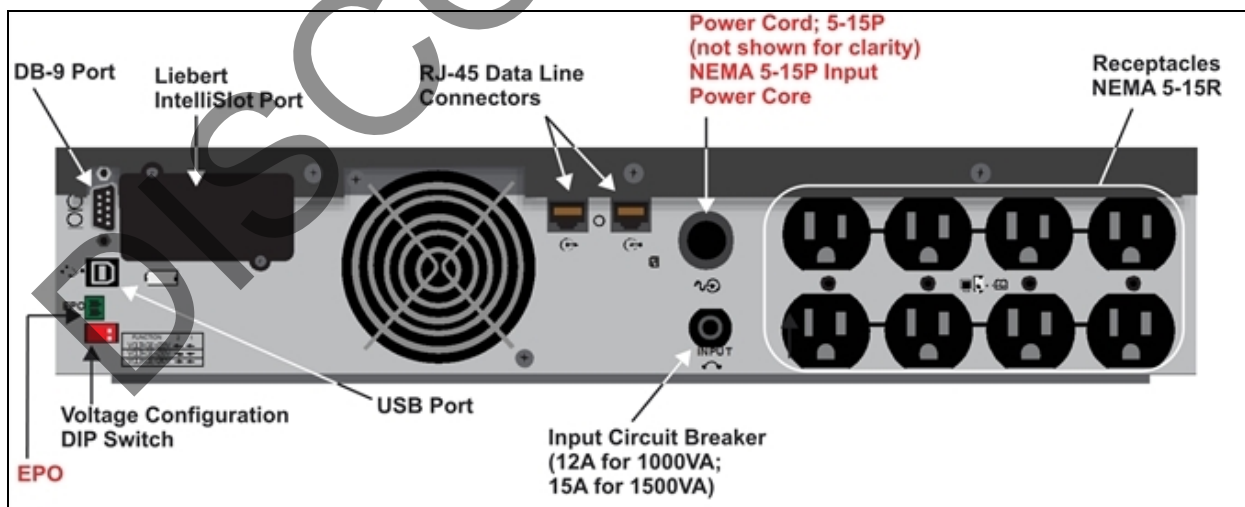


Figure 1.3 1920VA—rear view


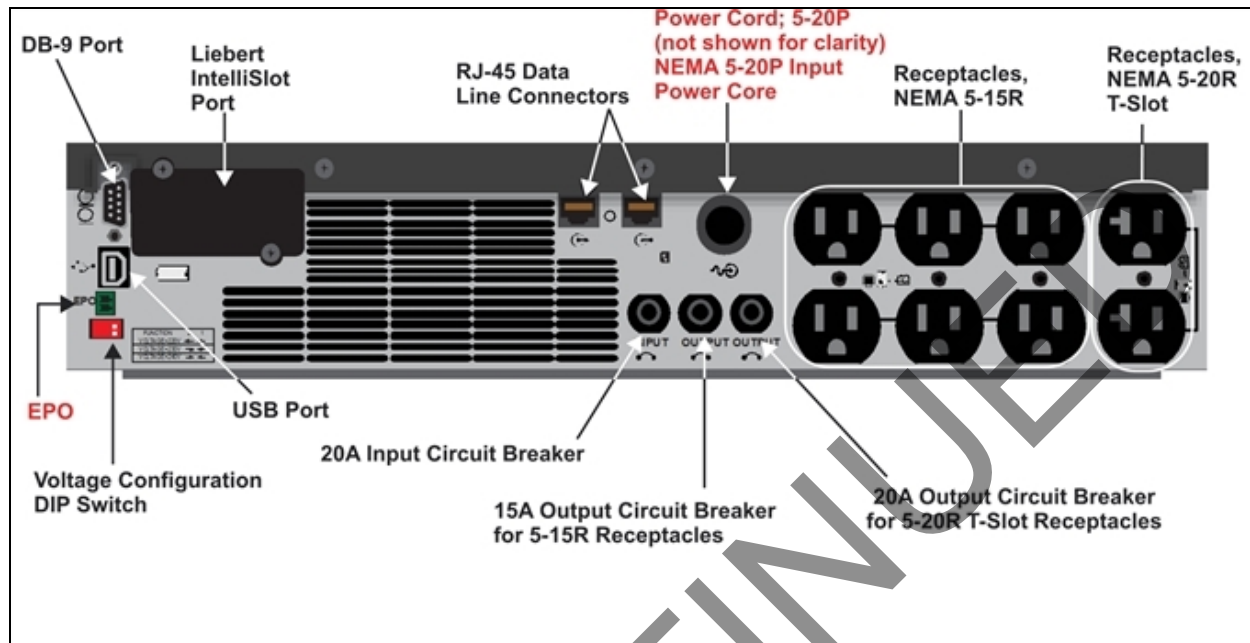


Figure 1.4 3000VA—rear view

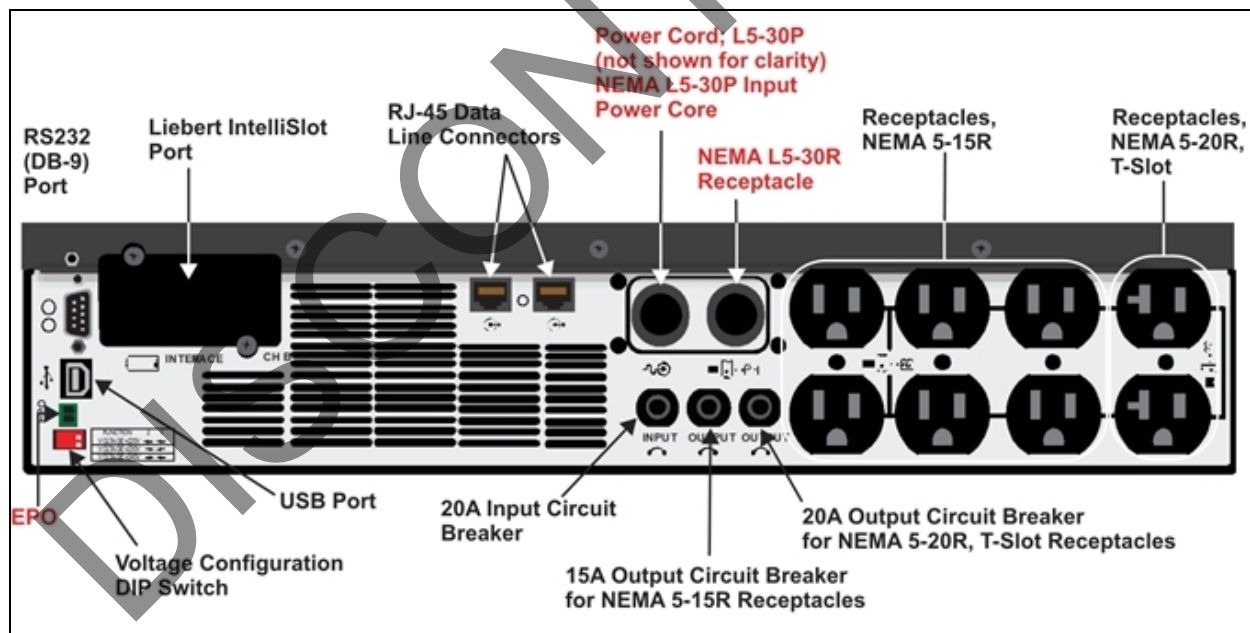


2 WHAT'S INCLUDED

The Liebert PSI is shipped with the following items:

- Multi-Language User Manual on CD
- Liebert MultiLink Shutdown Software and User Manual on CD
- Contact Closure (ML9P9S) Cable
- USB Cable
- Tower Stand
- Rack-Mount Handles
- Battery-UPS Tab
- Mounting Hardware
- Fixed Mounting Rails
- EPO Connector

Figure 2.1 Accessories

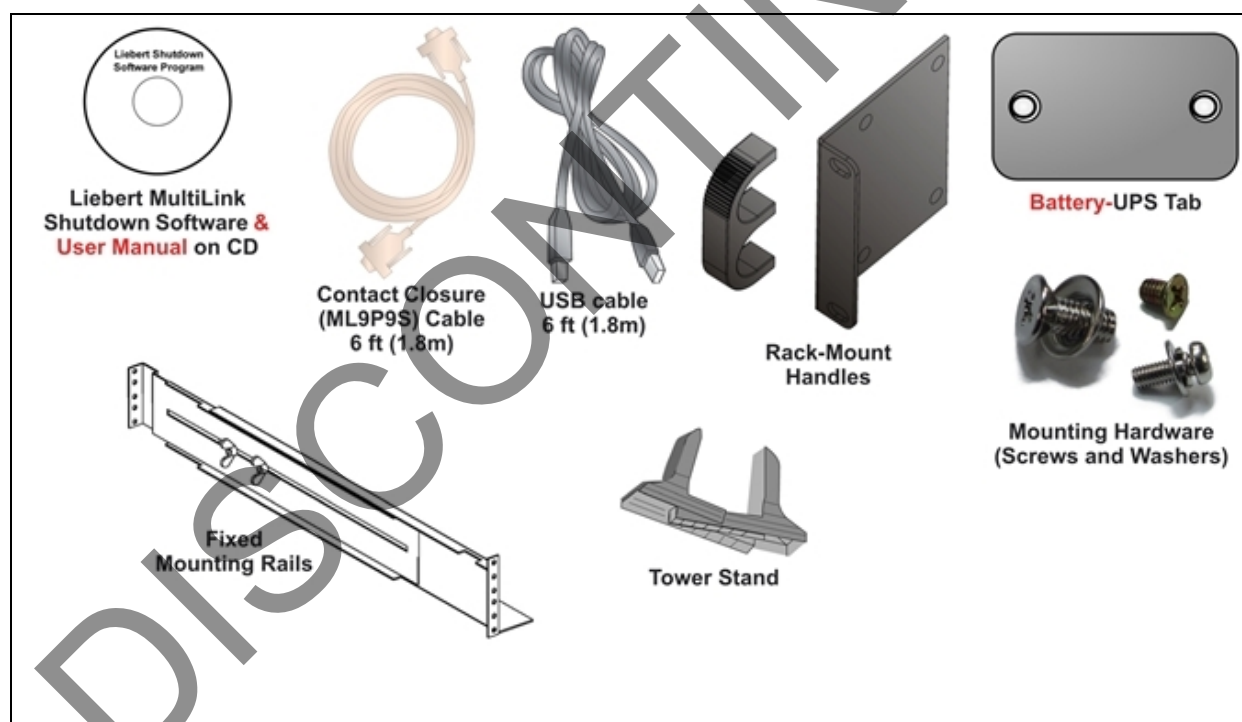

DISCONTINUED

This page intentionally left blank.

3 INSTALLATION

3.1 Preparation


! **CAUTION:** The UPS is heavy (see Table 8.1 on page 29). Take proper precautions when lifting or moving it.

The Liebert PSI may be installed in either a tower or rack configuration. Determine the method that suits the application and proceed.

Decide where to install the Liebert PSI. The UPS must be installed indoors in a controlled environment. Place it in an area with unrestricted airflow around the unit, away from water, flammable liquids, gases, corrosives and conductive contaminants (see Figure 3.1 below).

Maintain a minimum clearance of 12 inches (305mm) in the front and rear of the UPS. Maintain an ambient temperature range of 32°F to 104°F (0°C to 40°C).


Figure 3.1 Placing the Liebert PSI

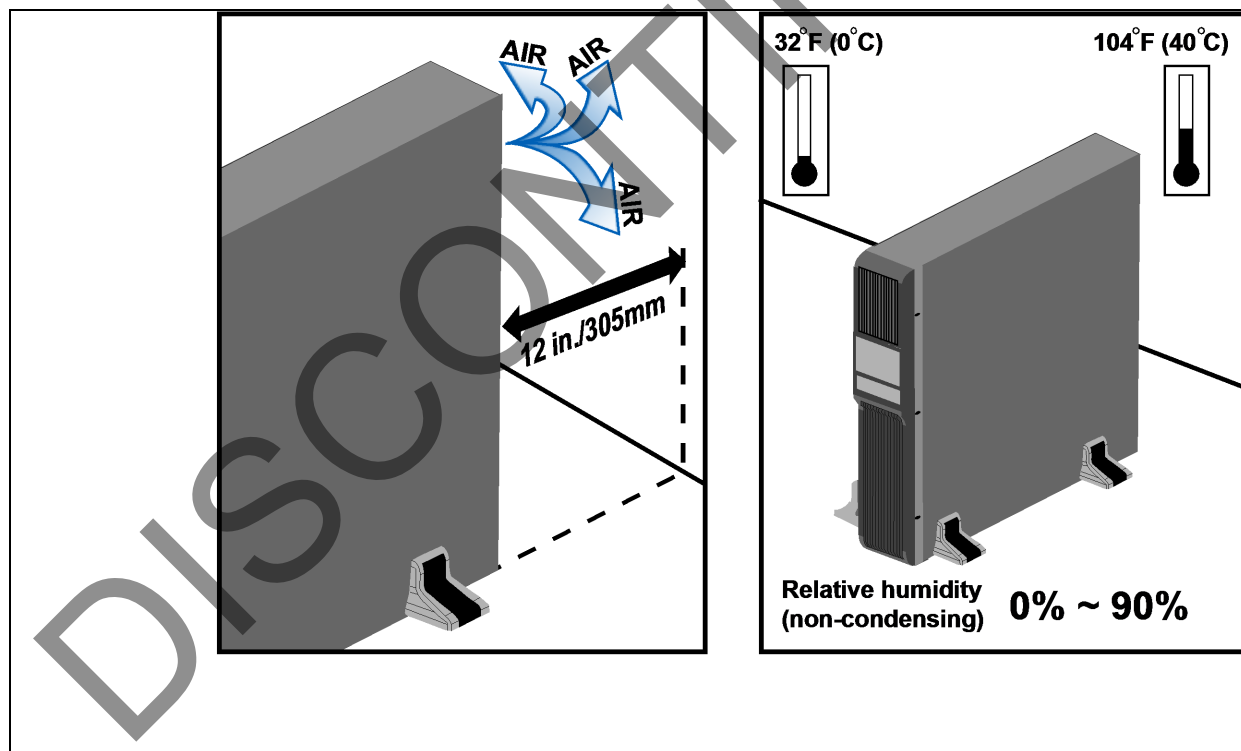

3.2 Tower UPS Installation

See Figure 3.2 on the next page when using the Liebert PSI in a tower configuration.

Figure 3.2 Tower configuration—attach Tower Stand

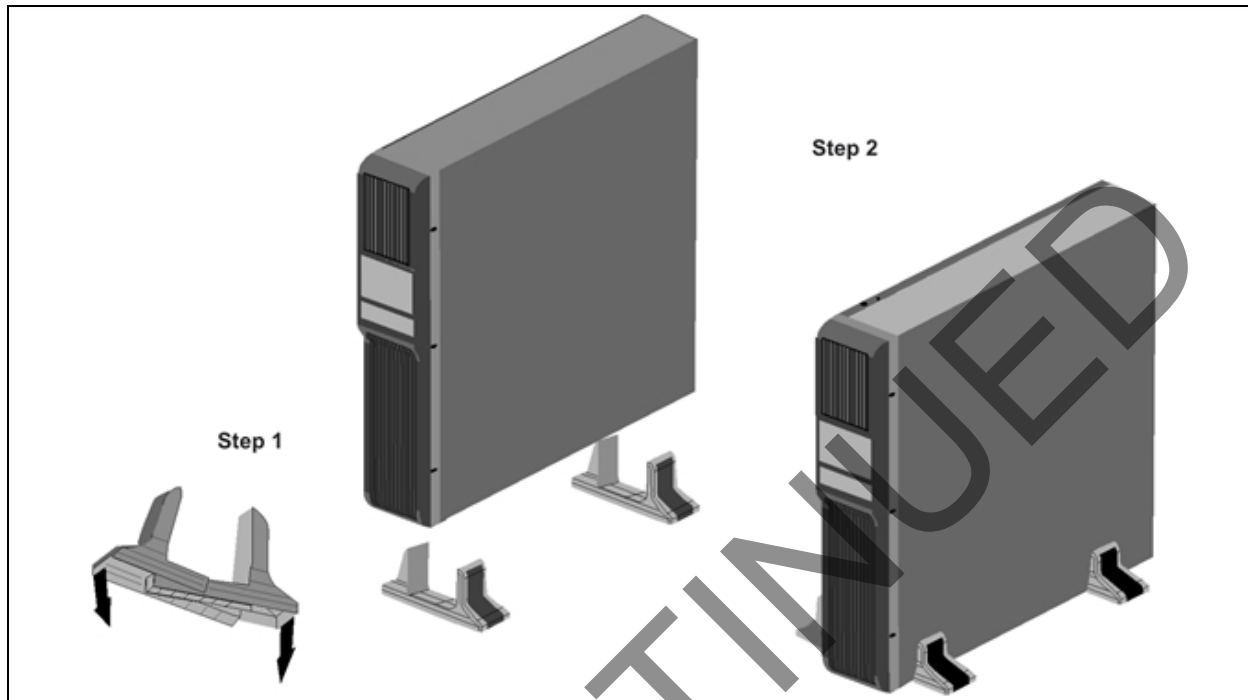


3.3 Rack-Mount UPS Conversion and Installation

See Figure 3.3 on the facing page when installing the Liebert PSI in a rack.

DISCONTINUED

Figure 3.3 Convert the Liebert PSI for rack installation

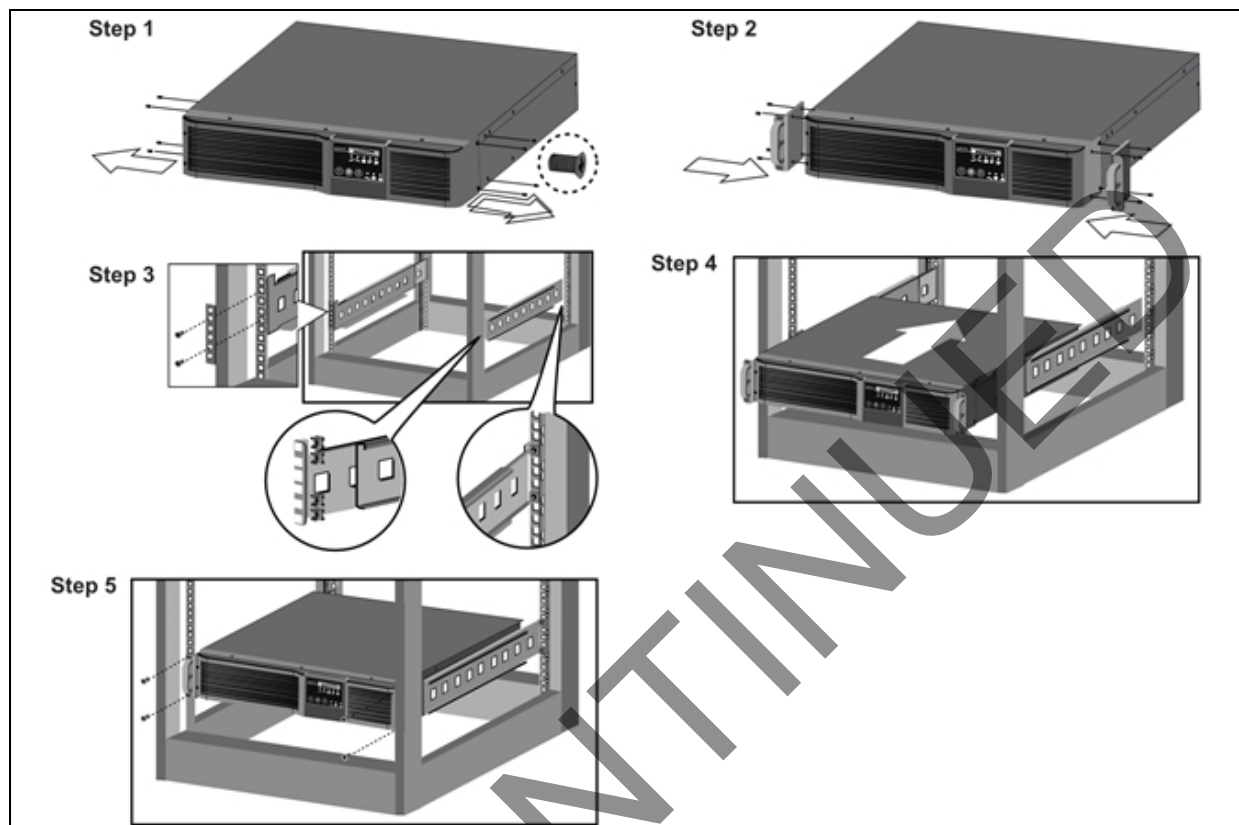

! **WARNING!** Placing heavy equipment near the top of a rack may increase the risk of tipping. Place the UPS in the bottom of the rack.

! **CAUTION:** Lifting equipment into rack may be a two-person job, depending on weight of equipment.

NOTICE

When rack-mounted, the UPS must be supported by a shelf, slide rails, brackets or fixed rails on each side. The rack-mount handles WILL NOT support the weight of the UPS. They are used to move the UPS into and out of the rack.

3.4 Orient Display for Installation

The Liebert PSI features a rotating display that may be oriented for either tower or rack installations.

To set the display for your installation, pull out on the display and rotate it until it is oriented correctly, then press it into the UPS until it is seated.

Figure 3.4 Adjusting the UPS display



3.5 Charge Batteries and Perform Battery Startup


Before connecting input power or connecting the load, Vertiv recommends these steps:

- Charge the battery for at least 8 hours.
- start the UPS on battery to ensure the battery is fully functional and charged.
- Turn the unit Off and proceed to [Connect Input Power and Load](#) below.

3.6 Connect Input Power and Load

Connect input power to the UPS, then plug the equipment into the outlets on the rear of the UPS. These UPS outlets provide battery backup and surge protection to the equipment when utility power fails, spikes or sags (see Figure 3.5 on the facing page).


Figure 3.5 Connect input power and load

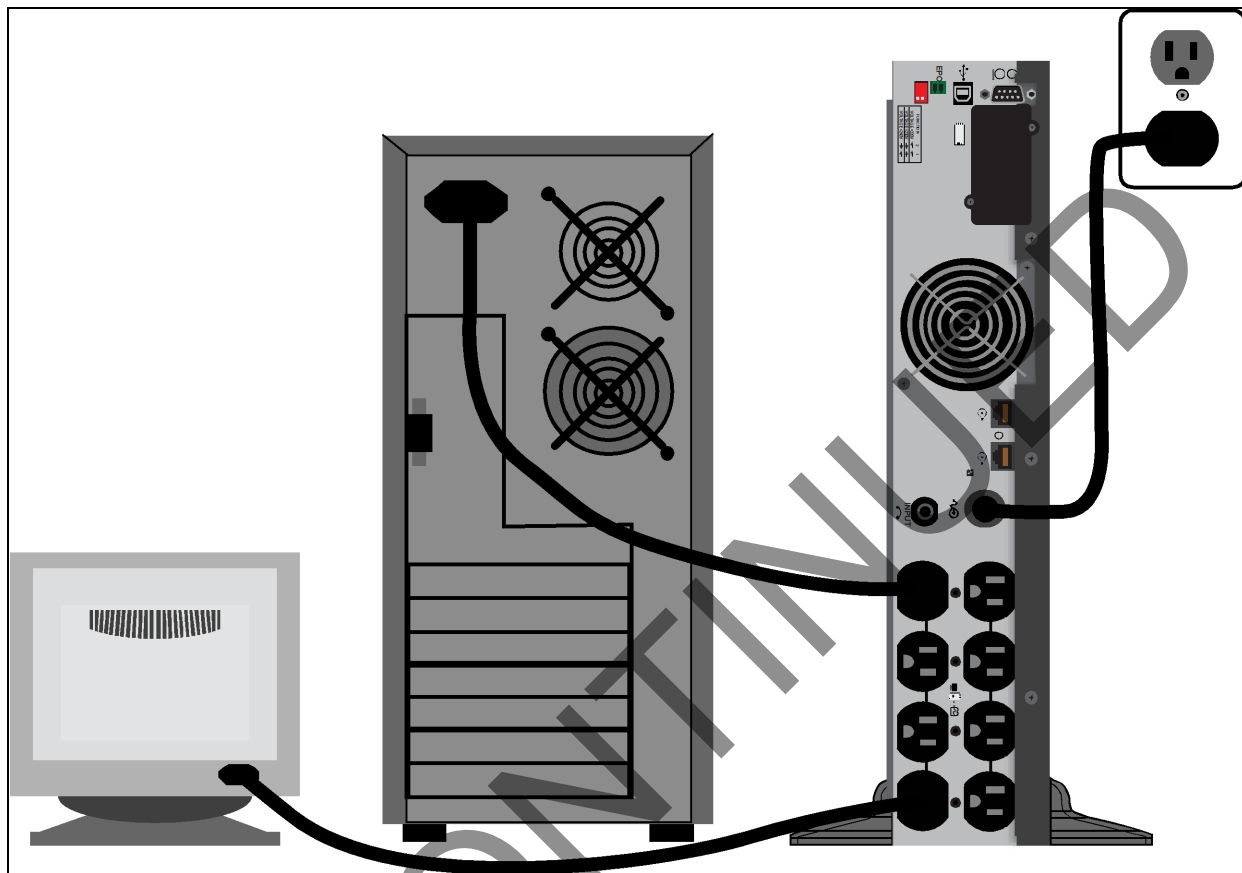

3.7 Connect Network Surge protection

Connect a 10 base-T/100 network cable to the RJ-45 network surge protection IN jack on the rear of the UPS. Connect from the OUT jack with network cabling to network equipment (see Figure 3.6 below).

Figure 3.6 Connect network surge protection

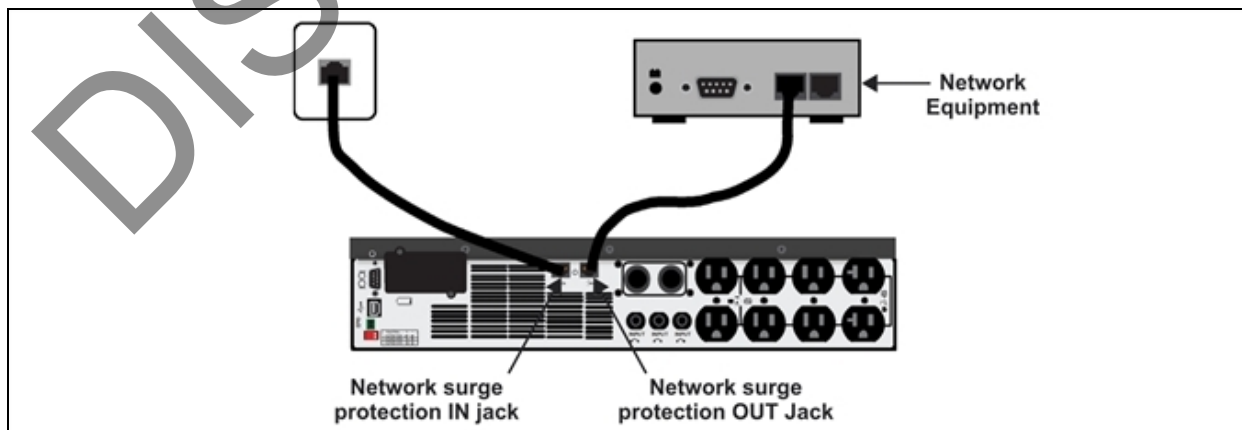


3.8 Connect Computer Interface Port

Determine what type of communication connection to use to manage the UPS. The Liebert PSI can be monitored with any of these communication methods:

- contact closure
- USB
- SNMP (requires optional IS-WEBRT3 card)

Connect the appropriate, factory-supplied cable to the interface port on the rear of the UPS and to the computer interface port. See the Liebert MultiLink shutdown software user manual for details and installation information; the manual, SL-53625, is available online at www.VertivCo.com. Also refer to [UPS Communication](#) on page 26.

Figure 3.7 Connect computer interface port

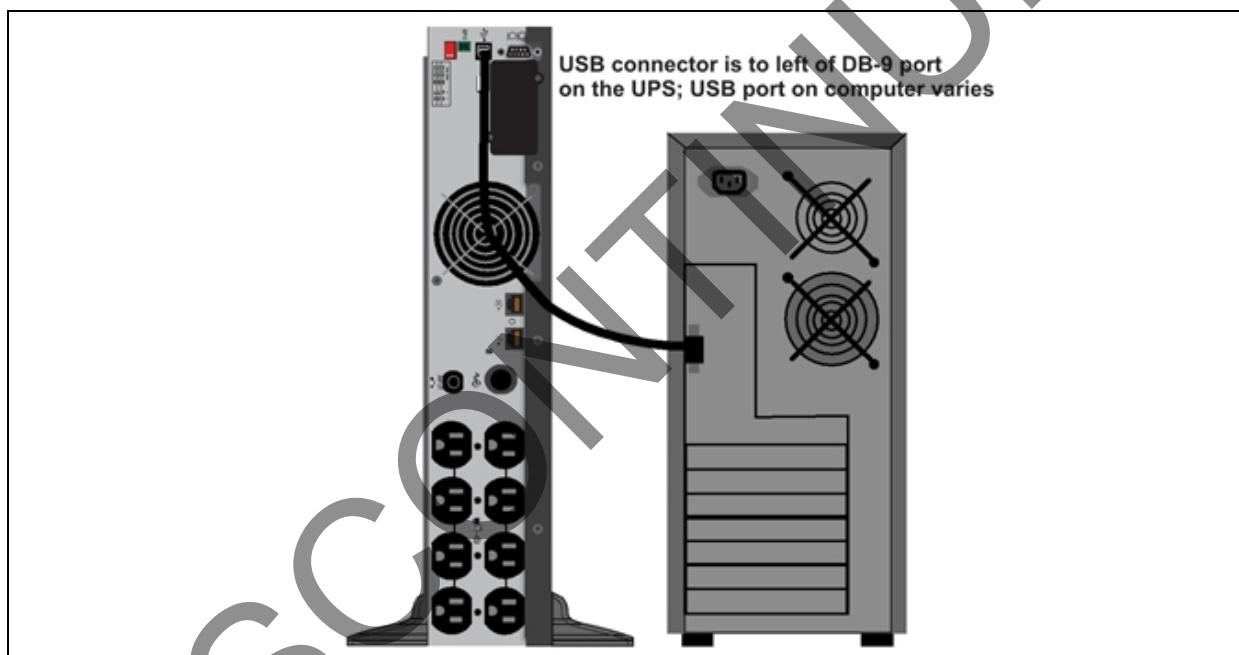

3.9 Set Up Liebert MultiLink software

To start using Liebert MultiLink (software and user manual available at www.VertivCo.com):


- Install the software. See the Liebert MultiLink quick-start guide or user manual for installation instructions.
- Connect one end of the USB cable (supplied) to the USB port on the rear of the UPS. Connect the other end to a USB port on the computer. See the Liebert MultiLink user manual for operating instructions.

NOTE: Vertiv recommends connecting the USB cable directly to the computer **WITHOUT** using a USB hub.

3.10 EPO Switch

The Liebert PSI is equipped with an Emergency Power Off (EPO) switch. The user must supply a means of interfacing with the EPO circuit to allow disconnecting the UPS input feeder breaker to interrupt all sources of power to the UPS and connected equipment to comply with national and local wiring codes and regulations.

Figure 3.8 EPO connection for normally open operation

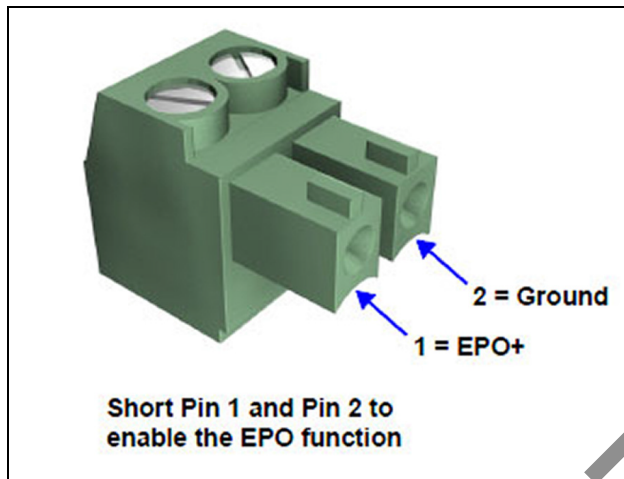

DISCONTINUED

DISCONTINUED

This page intentionally left blank.

4 CONTROLS AND INDICATORS

Buttons on the front panel display control the Liebert PSI. Eight LEDs indicate the UPS's status. Refer to Figure 4.1 below and Table 4.1 below.

Figure 4.1 Display and status indicators

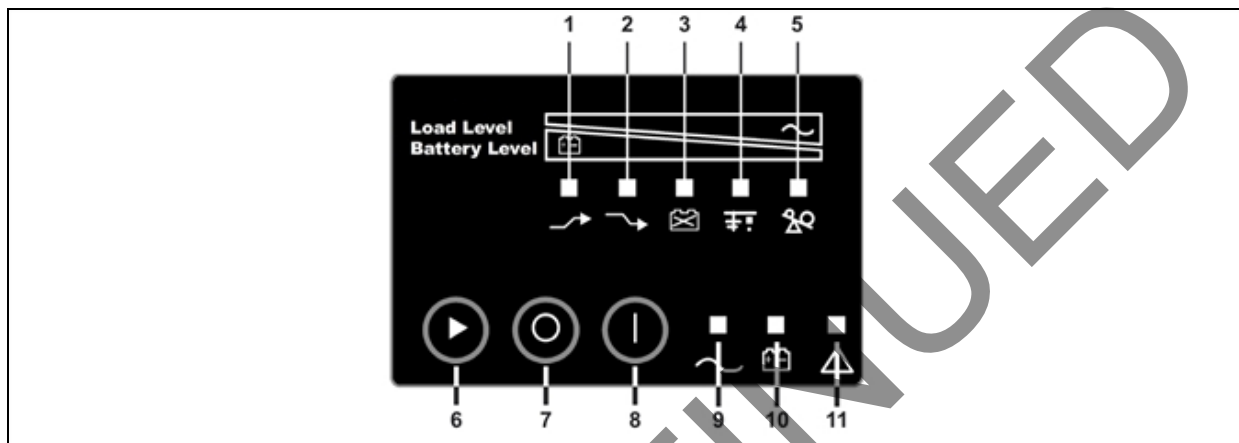


Table 4.1 Display and status indicators function, legend

Item		Status Indicators	Description
1	LED 1	AVR Boost	UPS Operation in AVR Boost Mode
2	LED 2	AVR Buck	UPS Operation in AVR Buck Mode
3	LED 3	Battery Condition	Battery Fault/Weak
4	LED 4	Grounding/Site Wiring Fault (North America only)	UPS Grounding/Site Wiring Fault
5	LED 5	Overload	UPS Overload
1 to 5	Load/Battery Level		Indicate Load/Battery Level
6	Status Change Button		Switches Display from Load Level Indicators to Battery Level Indicators
7	OFF Button		UPS Off
8	ON Button		Turn on UPS, Manual Self-Diagnostic (Normal Mode), Silence Alarm (Battery Mode)
9	LED 9	Normal Mode	UPS Operation in Normal Mode
10	LED 10	Battery Mode	UPS Operation in Battery Mode
11	LED 11	UPS Fault	UPS Fault

4.1 Control Buttons

4.1.1 On/Alarm Silence/Manual Self-Diagnostic Test

This button controls output power to connected load(s). It has three functions:

- On
- Alarm Silence

- Manual Self-Diagnostic Test

ON—Start the UPS by pressing this button for more than 3 seconds, then releasing the button (an alarm will sound briefly). If the ON button is pressed and utility is outside input parameters, the UPS will start on battery (dark start).

Alarm Silence—Silence a battery mode audible alarm by pressing this button for longer than one second, then releasing it.

Manual Self-Diagnostic Test—To initiate a Manual Self-Diagnostic, press this button for at least three (3) seconds while operating from utility power. UPS will switch to Battery Mode to detect battery voltage and whether the UPS is operating normally.

- **If LED indicates the battery is weak:** Allow the UPS to recharge the batteries for 8 hours. Retest the battery after recharge.
 - If LED still indicate battery weak after the battery has been retested, contact your local dealer, Vertiv representative or Liebert Applications.
- **If LED indicates a Battery Fault:** Contact your local dealer, Vertiv representative or Liebert Applications.
- **If LED indicates UPS Fault:** Remove the load, retest the self diagnostic test, if LED indicated UPS Fault, Contact your local dealer, Vertiv representative or Liebert Applications.

NOTE: Refer to Figure 4.1 on the previous page and Table 4.1 on the previous page for details about the LEDs' meaning.

4.1.2 Off Button

When the UPS is operating in either Normal Mode or Battery Mode, pressing the Off button for more than three seconds will shut down the UPS.

4.2 Status Indicators

4.2.1 Status Change Button

The Status Change Button determines the information displayed by the five LEDs on the front panel. The default information shown by the LEDs is the load level on the UPS. Pressing the Status Change Button while the UPS is On prompts the LED display to show battery capacity for 5 seconds. This function assists in assessing the meaning of status indicators as described in [UPS Status Indicators](#) on the facing page. See Figure 4.1 on the previous page and Table 4.1 on the previous page for the Status Change Button's location.

4.2.2 Load Level Indicator

The five LEDs at the top of the front panel illuminate with a steady glow to indicate the load level on the output of the UPS. The LEDs show the load level as a range, $\pm 5\%$. The LEDs' load level meanings and colors are:

LED 1		LED 3		
10 - 24% – Green	25 - 49% – Green	50 - 74% – Yellow	75 - 99% – Yellow	100% or greater – Red

4.2.3 Battery Level Indicator

The five LEDs illuminate with a steady glow to indicate battery capacity. Battery capacity is shown for five seconds after the Status Change Button is pressed. The LEDs show the battery capacity as a range, $\pm 5\%$. The LEDs' battery level meanings and colors are:

LED 1	LED 2	LED 3	LED 4	LED 5
100 - 76% – Green	75 - 51% – Green	50 - 26% – Yellow	25 - 11% – Yellow	10% or less – Red

4.2.4 UPS Status Indicators

LEDs on the display panel illuminate with a steady glow or flash to indicate the UPS's status:

Normal Mode—The Normal Mode indicator illuminates (LED 9) with a steady glow when utility power is available and within the input specifications.

Battery Mode—The Battery Indicator illuminates (LED 10) with a steady glow when the UPS is operating on battery

AVR Boost, AVR Buck—When the UPS is in AVR Boost/Buck Mode, the LED display will indicate the relative load level on the output of the UPS and will flash LED 1 (boost) or LED 2 (buck) to indicate the mode.

Weak Battery—When the UPS battery voltage is low, the LED display will indicate the relative load level on the output of the UPS and LED 3 will flash as a warning.

Site-Wiring Fault—In case of a site-wiring fault, the LED display will indicate the relative load level on the output of the UPS and LED 4 will flash as a warning.

NOTE: Site-wiring fault indication available in North America only.

Overload—When UPS operates in overload status, the LED display will indicate the relative load level on the output of the UPS and LED 5 will flash as a warning.

Table 4.2 Status indicators—color, illumination mode

Status	LED 1	LED 2	LED 3	LED 4	LED 5	LED 9	LED 10	LED 11
Normal Mode						Green Steady		
AVR Boost	Green Flashes					Green Steady		
AVR Buck		Green Flashes				Green Steady		
Battery Mode (dark start)							Yellow Steady	
Weak Battery			Yellow Flashes					
Site-Wiring Fault				Yellow Flashes				

Table 4.2 Status indicators—color, illumination mode (continued)

Status	LED 1	LED 2	LED 3	LED 4	LED 5	LED 9	LED 10	LED 11
Overload					Red Flashes			
Battery Fault Shutdown			Yellow Steady					Red Steady
Overload Shutdown					Red Steady			Red Steady
UPS Output Abnormal Shutdown							Yellow Steady	Red Steady

DISCONTINUED

5 OPERATIONAL MODES

5.1 Normal Mode

When the UPS is in Normal Mode, the Normal Mode Indicator illuminates green.

5.2 Buck/Boost Mode

The Automatic Voltage Regulator (AVR) circuitry compensates for fluctuations in utility power, such as voltage surges and sags. When the Liebert PSI detects an abnormality, it raises the undervoltage (boost) or lowers the overvoltage (buck) as needed. The AVR operates automatically and maintains the output voltage to the connected equipment, without utilizing the batteries.

LED 1 flashes green and LED 9 illuminates steady green when the UPS is in Boost Mode. LED 2 flashes green and LED 9 illuminates steady green when the UPS is in Buck Mode (see [Specifications](#) on page 29 for details).

5.3 Battery Mode

The UPS switches to Battery Mode in the event of an extreme input voltage/frequency condition or utility failure.

When the UPS is in Battery Mode, the Battery Indicator illuminates amber and an alarm sounds at two-second intervals. As capacity decreases, fewer indicators remain illuminated.

When a Low Battery condition occurs, the Battery Indicator flashes amber and an alarm sounds at one-second intervals. Refer to Table 8.1 on page 29 for approximate battery run times.

5.4 Battery Recharge Operation

Once utility power is restored, the UPS resumes normal operation and the Battery Charger begins recharging the batteries.

DISCONTINUED

DISCONTINUED

This page intentionally left blank.

6 COMMUNICATION



6.1 DB-9 Connector

The UPS has a DB-9 (9 pin female) connector on the rear to allow UPS status communications with a computer running Liebert MultiLink shutdown software in contact closure mode. The connection provides On Battery and Low Battery notification.

When power is interrupted and battery power is low, Liebert MultiLink software can signal the host computer to gracefully shut down the operating system.

Table 6.1 DB-9 pin assignment

DB-9 Pin	Assignment Description
1	Low Battery (open collector)
2	UPS TxD (not used)
3	UPS RxD (not used)
4	Remote Shutdown (5-12V); on-battery operation
5	Common
6	Output Off, (short to Pin 5, non-latching); any mode operation
7	Low Battery (open emitter)
8	Utility Fail (open emitter)
9	Utility Fail (open collector)

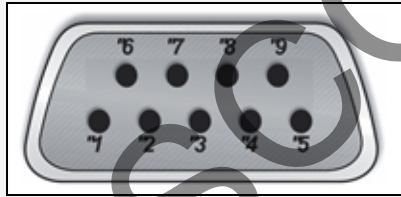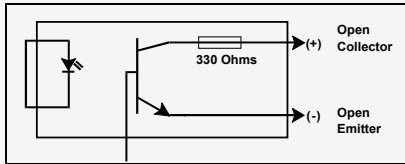Pin Assignment	Collector to Emitter*
	

6.2 Remote Shutdown Via the DB-9 Connector

The Liebert PSI can be shut down remotely by shorting Pins 5 and 6 or via Pins 4 and 5 of the DB-9 connector.

6.2.1 Any Mode Shutdown Via Pins 5 & 6

When Pin 6 is shorted to Pin 5, the UPS output is shut Off no matter what mode the UPS is operating. The UPS cannot be started as long as the pins are shorted. When the short is removed, the UPS output can be enabled by pressing the ON/Alarm Silence/Manual Self-Diagnostic button.

6.2.2 Battery Mode Shutdown Via Pins 4 & 5

While the UPS is operating on battery, a 5-12VDC signal for 2 seconds or longer is required to signal a shutdown. Signals for less than 2 seconds are ignored.

After Pin 4 receives the shutdown signal, a 2-minute shutdown timer begins a countdown. The shutdown timer cannot be stopped: If utility power returns during the 2-minute countdown, the shutdown timer continues until the end of 2 minutes and the UPS turns Off. The UPS will restart 10 seconds after utility power returns.

6.3 Network Surge Protection Connectors

Network (in and out) connectors on the rear of the UPS provide transient voltage surge suppression (TVSS) for network devices.

6.4 UPS Communication

The Liebert PSI is equipped with a Liebert IntelliSlot® port to provide advanced communication and monitoring options.

Liebert MultiLink software continually monitors the UPS and can shut down your computer or server via USB, contact closure and SNMP (via IS-WEBRT3 card) in the event of an extended power failure.

The Liebert IS-WEBRT3 provides SNMP and Web-based monitoring and control of the UPS across the network.

NOTE: The USB, SNMP (via IS-WEBRT3 card) and contact closure communication operate in parallel. Using the Liebert IS-WEBRT3 disables the communication of the DB-9.

6.5 UPS Inverter/Transfer Voltage Configurations

A two-pin DIP switch on the rear of the PSI permits setting the UPS to operate at nominal voltages of 110V, 120V or 127V. This feature will change the high and low points at which the UPS switches to battery power. It also changes the UPS' output voltage when the UPS is operating in battery mode. The factory default setting is 120 VAC.

Figure 6.1 DIP switch settings for 120V system

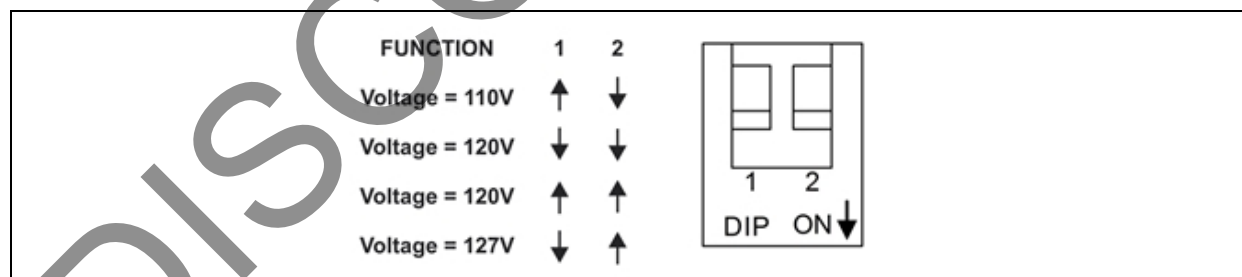


Table 6.2 Voltage configurations

Setting	Input Voltage Range	Output Voltage (Battery Mode)
110	83~138	110VAC
120	90~150	120VAC
127	96~159	127VAC

7 BATTERY MAINTENANCE

7.1 Battery Charging, Storage

The batteries are valve-regulated, nonspillable, lead acid and must be kept charged to retain their design life. The Liebert PSI continuously charges the batteries when connected to the utility supply, even while the UPS is switched Off.

If the Liebert PSI will be stored for an extended period, Liebert recommends connecting the UPS to input power for at least 8 hours every four to six months to keep the batteries charged.

7.2 Internal Battery Replacement Procedure


NOTICE

This UPS is equipped with internal batteries that the user can replace without shutting down the UPS or connected loads (hot swappable). Caution must be exercised when replacing the batteries because the load is unprotected from power fluctuations and power failures.

To replace the batteries:

1. Remove the two screws on the left side of the front bezel.
2. Pull the front bezel off the UPS.
3. Remove the screw on the battery connectors holder.
4. Remove the two screws on the battery bracket.
5. Disconnect the two slotted, red/gray and black battery connectors.
6. Grasp the battery pack assembly by the handle and pull it out of the front of the UPS.
7. Unpack the new battery assembly, taking care not to destroy the packing.
8. Compare the new and old battery assemblies to make sure they are the same. If so, proceed with replacement. If they are different, STOP and contact your local dealer, Vertiv representative or Liebert Applications.
9. Slide the new battery pack into the UPS.
10. Reattach the battery bracket with the two screws.
11. Reconnect the slotted, red/gray and black battery connectors.
12. Reinsert the screw on the battery connectors holder.
13. Reattach the front bezel.

Figure 7.1 Battery replacement

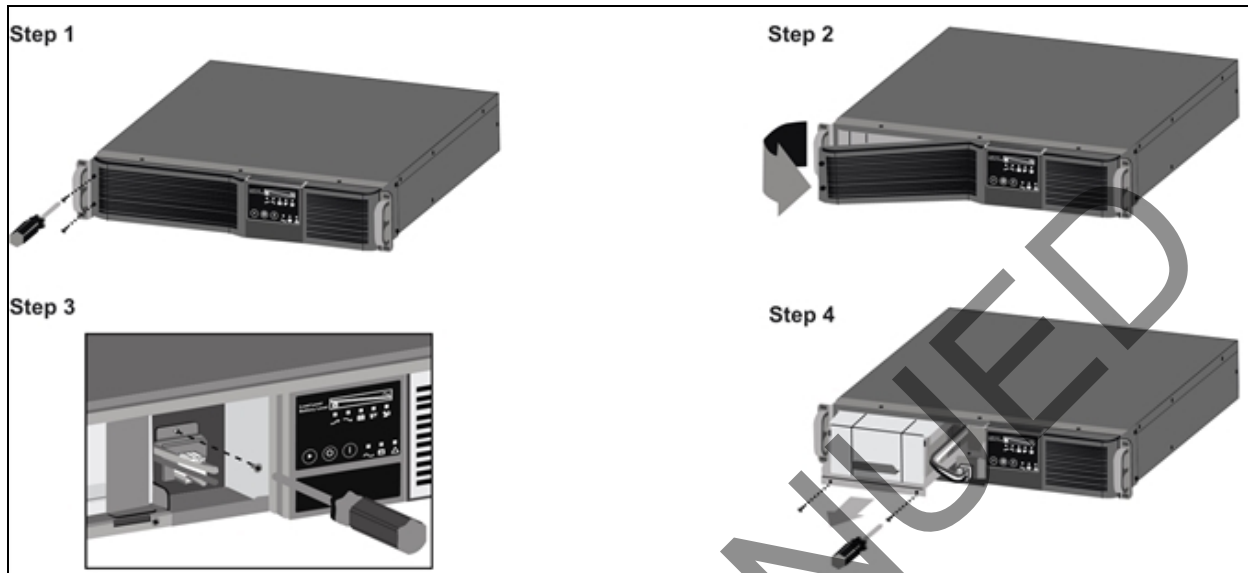

DISCONTINUED

8 SPECIFICATIONS

Table 8.1 Liebert PSI specifications

Model Number	PS1000RT3-120	PS1500RT3-120	PS2200RT3-120	PS3000RT3-120
Power Rating, VA/W	1000VA/900W	1500VA/1350W	1920VA/1920W	3000VA/2700W
Dimensions, W x D x H, in (mm)				
Unit	17.3 x 16.2 x 3.5 (440 x 412 x 88)	17.3 x 16.2 x 3.5 (440 x 412 x 88)	17.3 x 25.9 x 3.5 (440 x 657 x 88)	17.3 x 25.9 x 3.5 (440 x 657 x 88)
Shipping	22 x 20.7 x 9 (560 x 526 x 228)	22 x 20.7 x 9 (560 x 526 x 228)	22 x 32.8 x 9 (560 x 833 x 228)	22 x 32.8 x 9 (560 x 833 x 228)
Weight, lb (kg)				
Unit	43.4 (19.7)	46.5 (21.1)	76.3 (34.6)	84.2 (38.2)
Shipping	49.8 (22.6)	53.6 (24.3)	84.4 (38.3)	92.6 (42)
Input AC Parameters				
Surge Protection	570J			
Voltage Range Without Battery Operation	83~159 VAC, Configurable			
Frequency Range	45~65Hz, (±0.5Hz)			
Input Power Cord 10ft (3m) Attached	NEMA 5-15P Plug	NEMA 5-15P Plug	NEMA 5-20P Plug	NEMA L5-30P Plug
Output Receptacles	(8) NEMA 5-15R	(8) NEMA 5-15R	(6) NEMA 5-15R (2) NEMA 5-20R, accepts 15A Plug	(6) NEMA 5-15R (2) NEMA 5-20R, accepts 15A Plug (1) NEMA L5-30R
Voltage (Normal mode)	110 / 120 / 127 VAC (configurable) ±10%			
Voltage (Battery Mode)	110 / 120 / 127 VAC, configurable ±5% Before Low Battery Warning			
Transfer Time	4-6 ms, Typical			
Waveform	Sinewave			
Frequency, Normal Mode	45~65Hz, (±0.5Hz)			
Frequency, Battery Mode	50/60Hz, (±0.5Hz), Auto Sensing			
Overload Warning				
Normal Mode	>100% - 109%	Continuous Overload Alarm and Power to the Load		
	>110% - 120%	Shutdown after 10 Minutes		
	>120%	Shutdown UPS Immediately		
Battery Mode	>100% - 119%	Continuous Overload Alarm Till End of Battery Discharge		
	>120% - 130%	Shutdown After 10 Seconds		
	>130%	Shutdown UPS Immediately		
Battery Parameters				

Table 8.1 Liebert PSI specifications (continued)

Model Number	PS1000RT3-120	PS1500RT3-120	PS2200RT3-120	PS3000RT3-120
Power Rating, VA/W	1000VA/900W	1500VA/1350W	1920VA/1920W	3000VA/2700W
Type	Valve-Regulated, Nonspillable, Lead Acid			
Quantity x Voltage x Ah	3x36x7	3x36x9	6x72x7	6x72x9
Backup Time				
Full Load	3"14	2"33	2"41	2"32
Half Load	10"31	8"18	8"40	8"14
Recharge Time	5 Hours to 90% of Rated Capacity, After Full Discharge Into Resistive Load			
Environmental				
Operating Temperature	32°F to 104°F (0°C to 40°C)			
Storage Temperature	5°F to 104°F (-15°C to 40°C)			
Relative Humidity	0% to 95%, non-condensing			
Operating Altitude	Up to 10,000 ft. (3000m) at 95°F (35°C) without derating			
Audible Noise	<40 dBA, Internal Fan(s) Off <45 dBA, Internal Fan(s) On		<40 dBA, Internal Fan(s) Off <45 dBA, Internal Fan(s) On	
Agency				
Safety	UL 1778, c-UL Listed			
Surge	ANSI C62.41 CatA Lev3 (surges) IEC61000-4-5			
ESD	IEC61000-4-2			
Susceptibility	IEC61000-4-3			
Electrical Fast Transient	IEC61000-4-4			
Emissions	FCC Part 15, Class A			
Conducted Immunity	EN61000-4-6			
Harmonics	EN61000-3-2			
Network surge	UL 497 B			
Transportation	ISTA Procedure 1A Certification			
*NEC limits the input current rating of the PS2200RT3-120XR and PS2200RT3120XRW models to 80% of the input plug's rating. Up to 2200VA/1980W is available by contacting a certified electrician to change the input plug to 30A plug. Vertiv assumes no liability for damage caused by miswiring or misapplication of the input plug.				

DISCONTINUED

DISCONTINUED



VertivCo.com | Vertiv Headquarters, 1050 Dearborn Drive, Columbus, OH, 43085, USA

© 2017 Vertiv Co. All rights reserved. Vertiv and the Vertiv logo are trademarks or registered trademarks of Vertiv Co. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness herein, Vertiv Co. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications are subject to change without notice.

SL-23319_REV3_11-17/590-1717-501A